

Adapter Base Selection Guide

Base Model Number	Loop Type	Current Limit Resistor	Contact Type	Nominal Voltage	Current Draw on Alarm (mA)
B110LP/B401†	2-wire*	No	—	12/24 VDC	10-130**
B110RLP/B401R†/B401BR†	2-wire*	Yes	—	24 VDC	10-62
B401†	2-wire*	No	—	12/24 VDC	10-100**

* Functionality contingent on panel compatibility.

** Must be limited by control panel.

† Flangeless base.

Junction Box Selection Guide*

Base Model Number	Single Gang	3-1/2" Octagon	4" Octagon	4" Square	50 mm	60 mm	75 mm
B401	No	No	No	No	Yes	Yes	No
B110LP/RLP	Yes	Yes	Yes	Yes	No	No	No

* Box depth contingent on base and wire size. Refer to National Electrical Code or local applicable codes for appropriate recommendations.

©2008 by Honeywell International Inc. All rights reserved. Unauthorized use of this document is strictly prohibited.



This document is not intended to be used for installation purposes.
We try to keep our product information up-to-date and accurate.
We cannot cover all specific applications or anticipate all requirements.
All specifications are subject to change without notice.

For more information, contact Notifier Shanghai. Phone: (86) 21-2894-2000.
www.notifier.com